

**AKUSTIK 1 + SYLOMER®  
ACOUSTIC HANGERS  
INSTALLATION**

**CONCRETE CEILINGS**




**AMC Mekanocaucho**

# 1: FIX ACOUSTIC HANGERS TO CEILING USING APPROPRIATE FIXINGS





## 2: ACOUSTIC HANGERS FIXED

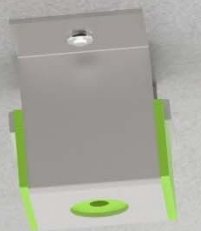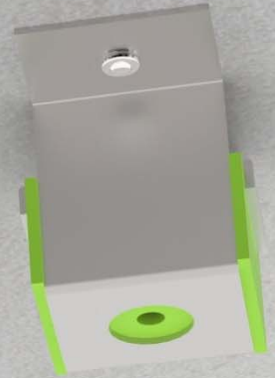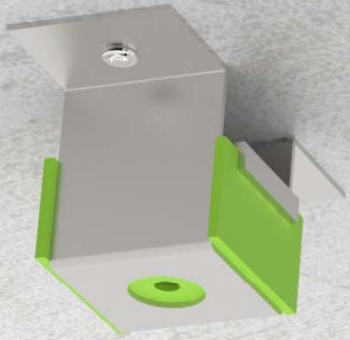



### 3: SCREW STUDBOLTS INTO THE THREADED NUT HOUSED WITHIN THE ACOUSTIC HANGER





# 4: ATTACH THE PROFILES TO THE END OF THE STUDBOLT



# 5: CHECK LEVELS OF THE HANGERS USING A LASER ALIGNMENT TOOL





# 6: FIX STUDBOLTS WITH LOCKNUTS




# 7: POSITION PLASTERBOARDS IN PLACE





# 8: PLASTERBOARDS FIXED

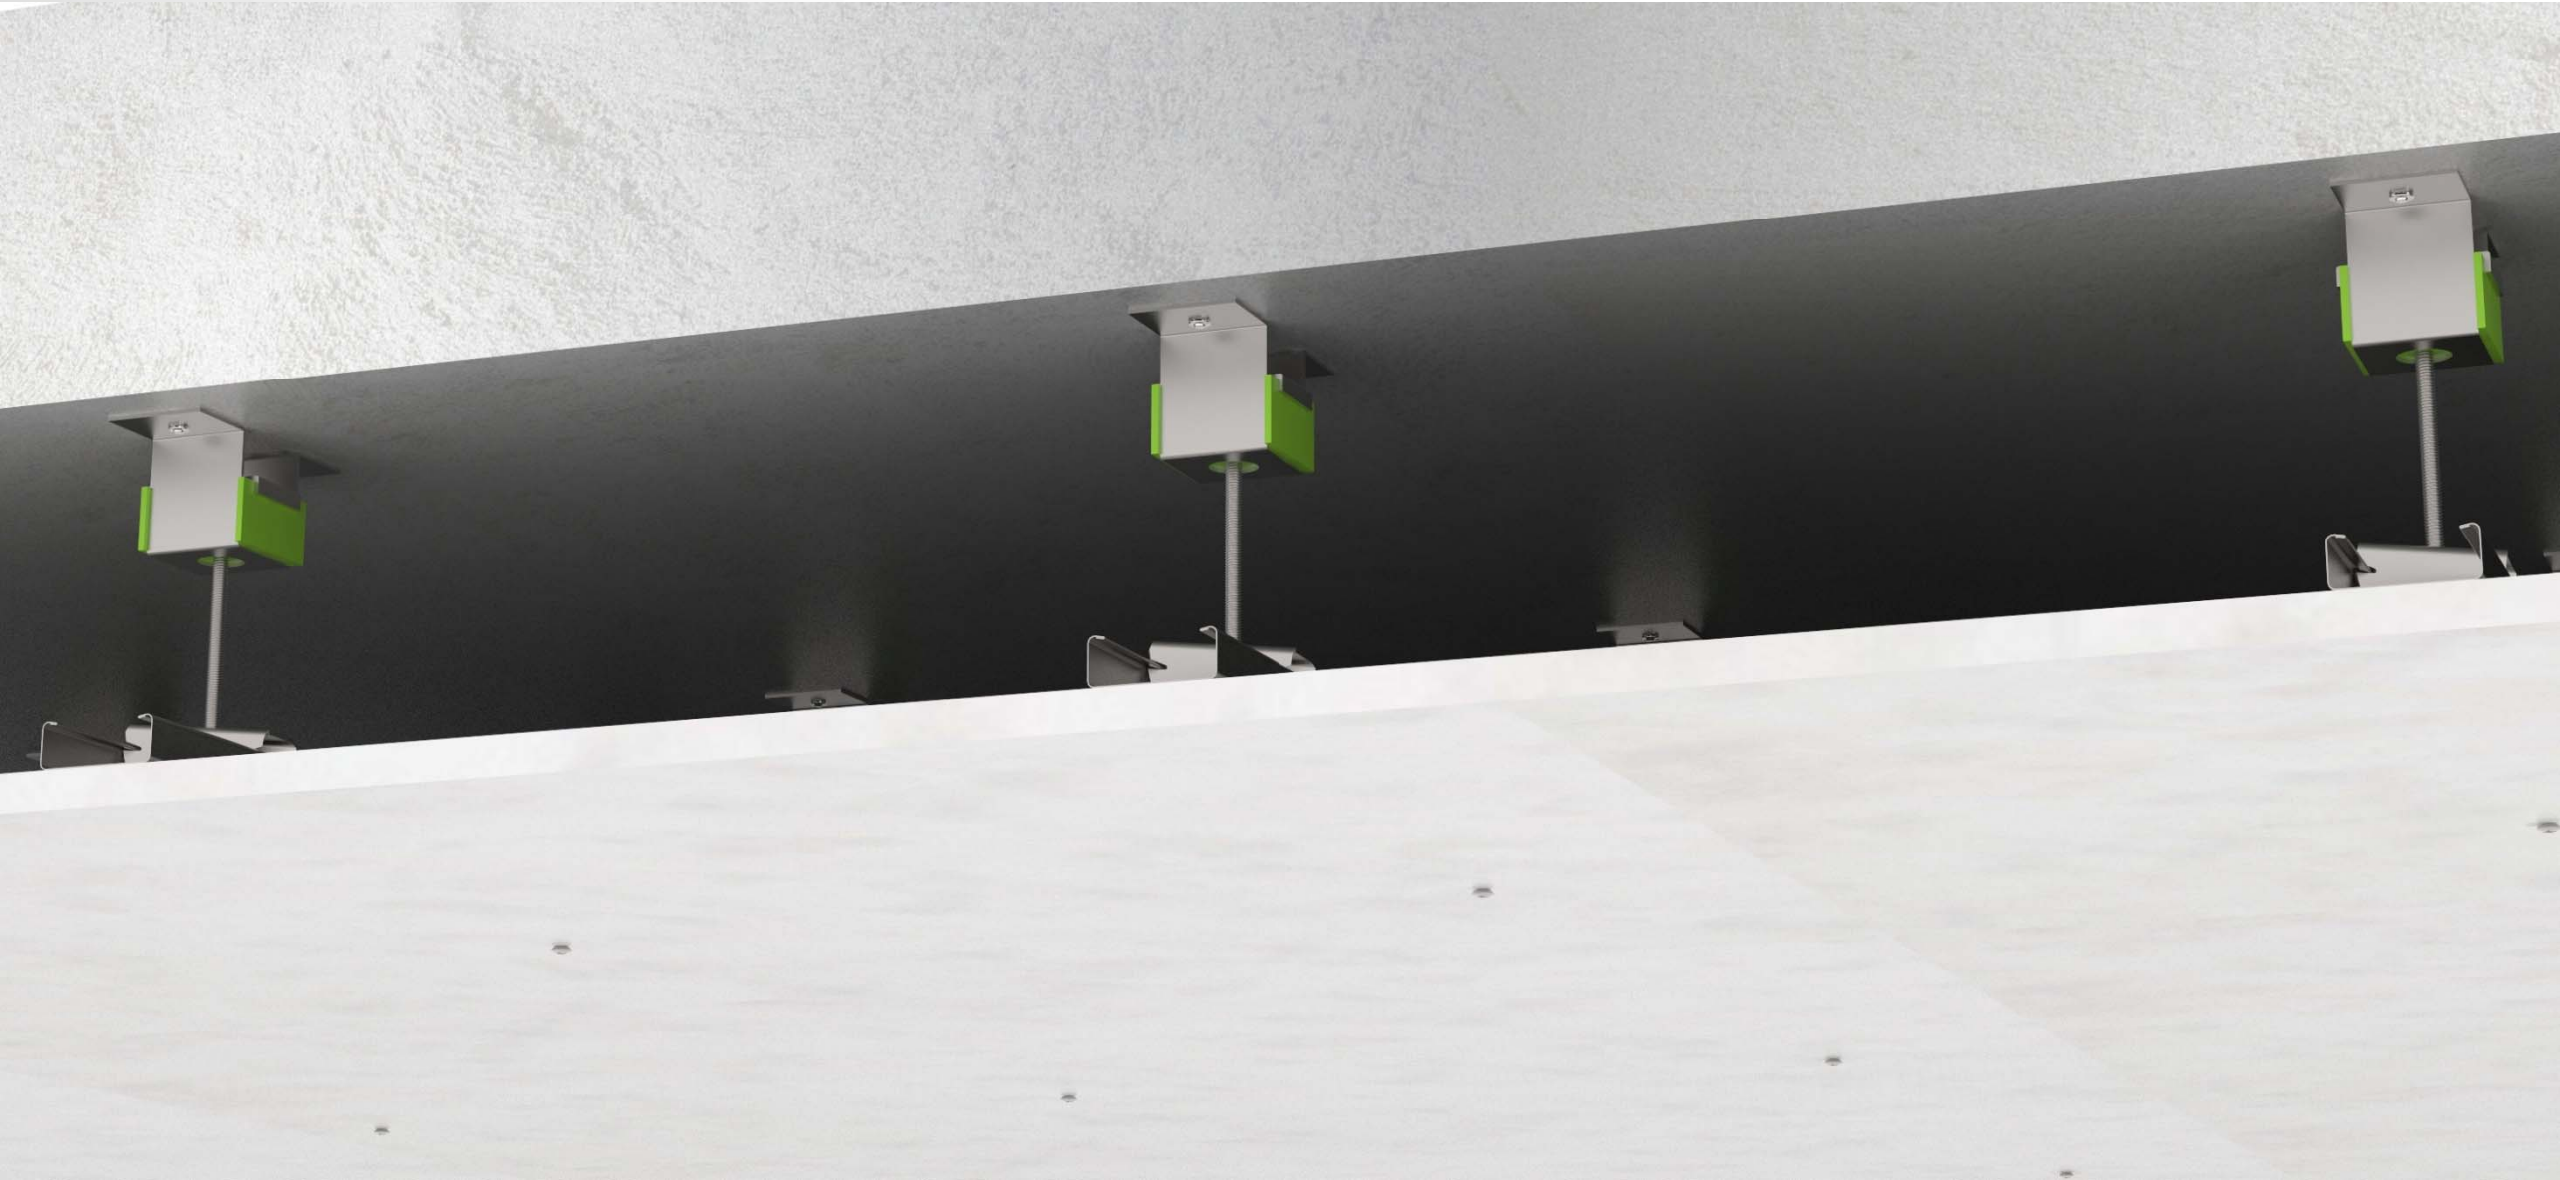

## 8: PLASTERBOARDS FIXED





# FREE TECHNICAL SUPPORT AVAILABLE UPON REQUEST

